


LCA Skid Plate Kit

Fits: 07-09 Fj, 03-09 4Runner, 03-09 GX470 (non-kdss)
4WD MODELS ONLY

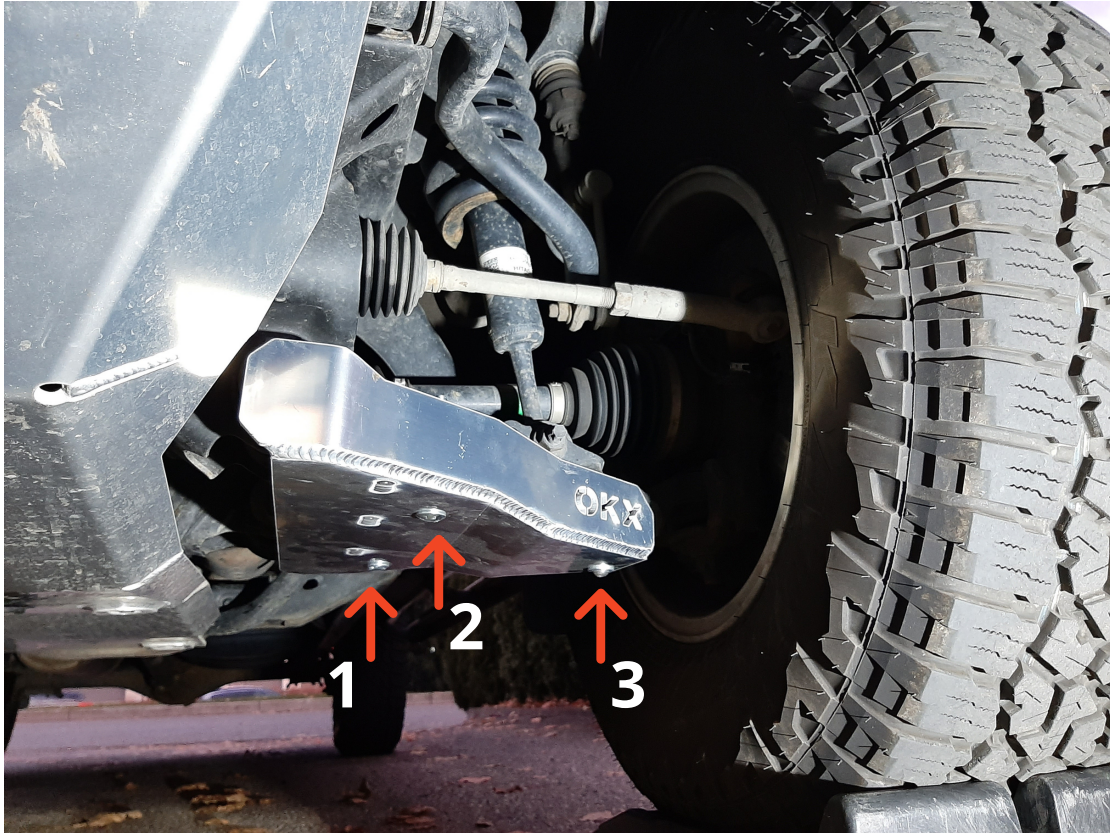

Install Lower Control Arm Skids using supplied hardware.

Loosely install hardware at the locations shown.

- 1.** 3/8"x 3.5" Carriage Bolt at the rear.
- 2.** 3/8"x 3" Carriage Bolt at the front.
- 3.** 5/16"x 2.5" Buttonhead bolt w/ washers at the outer hole.

Once all hardware is in place, tighten all fasteners.

Torque 3/8" Bolts to 20ft lbs and 5/16" bolts to 12ft lbs

Note: some aftermarket (stock) replacement arms may require drilling one or more holes