


LCA-2 Skid Plate Kit

2010-14 FJ, 2010-23 4Runner (non-KDSS only)

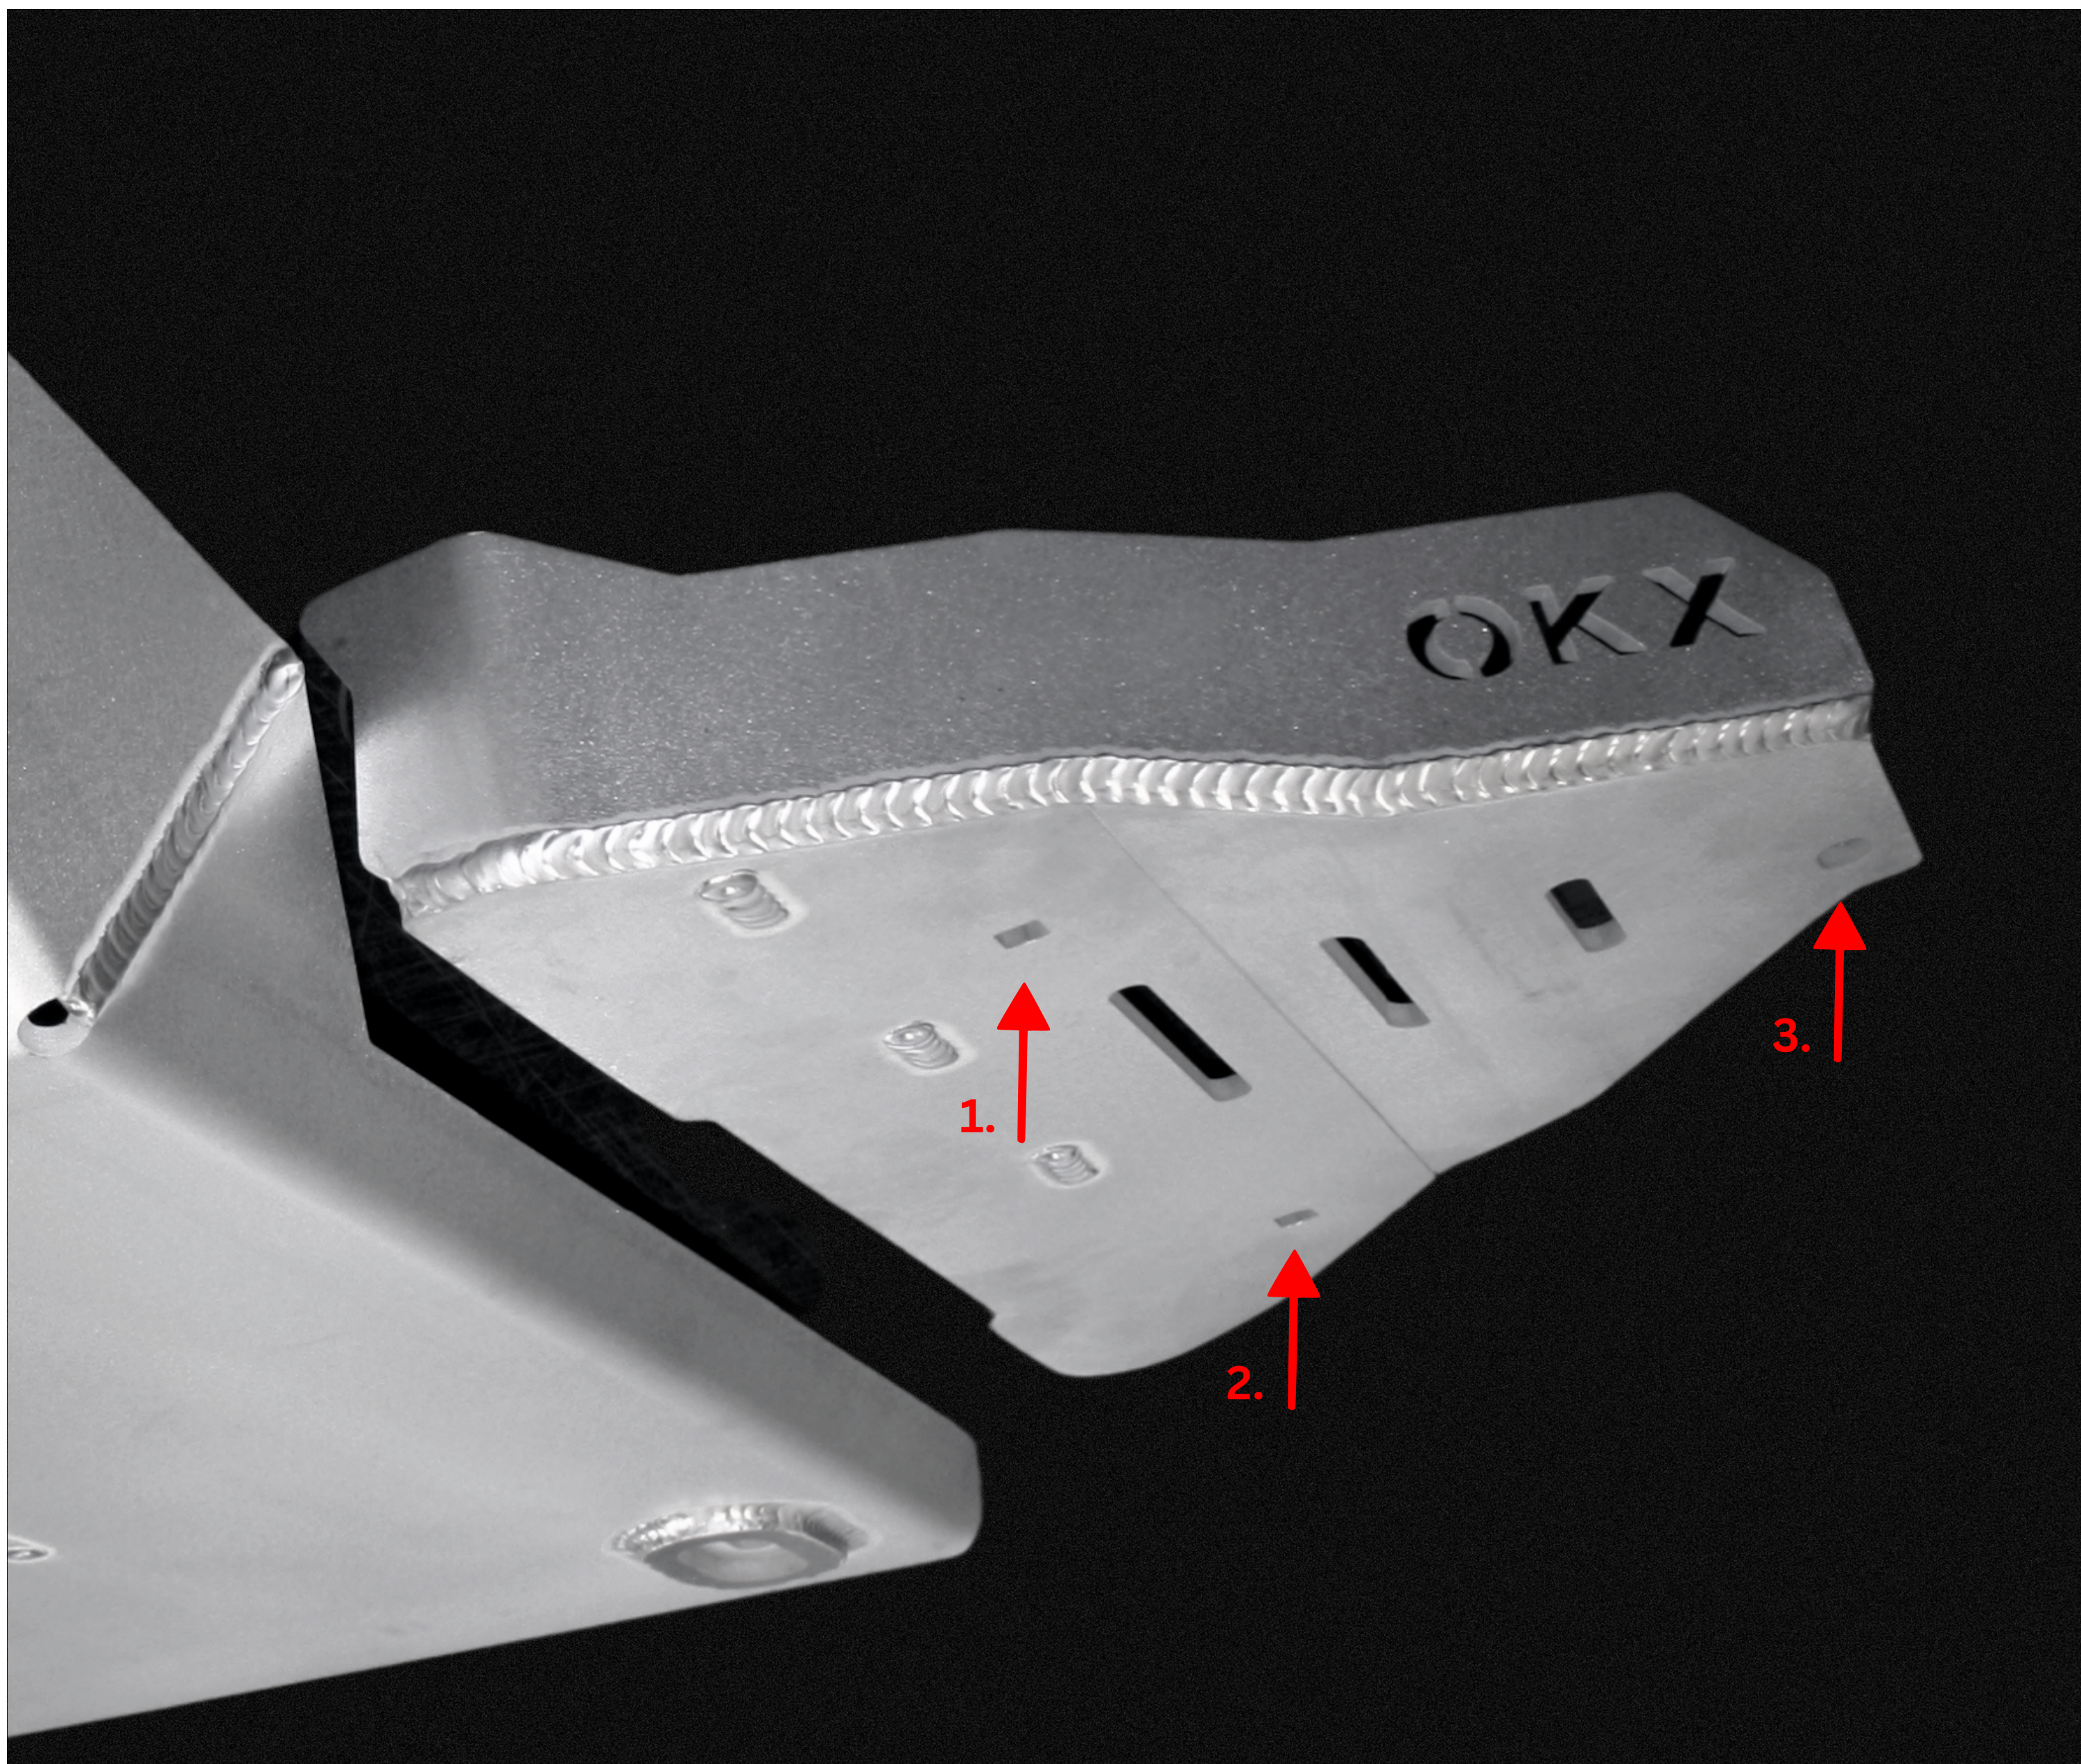

Any factory hole plugs will need to be removed before installation.

- Position LCA Skid Plate against bottom of control arm (driver side shown) and insert **3/8" x 3-1/2"** carriage bolt into **hole #1** and through control arm. Place large flat washer and nyloc nut on top of control arm- Do not tighten.
- Insert **3/8" x 4"** carriage bolt into **hole #2** and through control arm. Install large flat washer and nyloc nut on top of control arm- Do not tighten.
- Insert **5/16" x 3"** hex cap screw with flat washer into **hole #3** and through control arm. Install flat washer and locknut.
- Once all hardware is in place, check alignment and tighten all bolts. Repeat for passenger side. **Torque specs: 3/8" bolts - 20ft lbs , 5/16" bolts - 12ft lbs**

Note: Trimming of the factory skid plate is required to fit with OKX LCA Skid Plates.