




2010-2014 FJ, 2010-current 4Runner / GX460 Skid Plate Install Guide

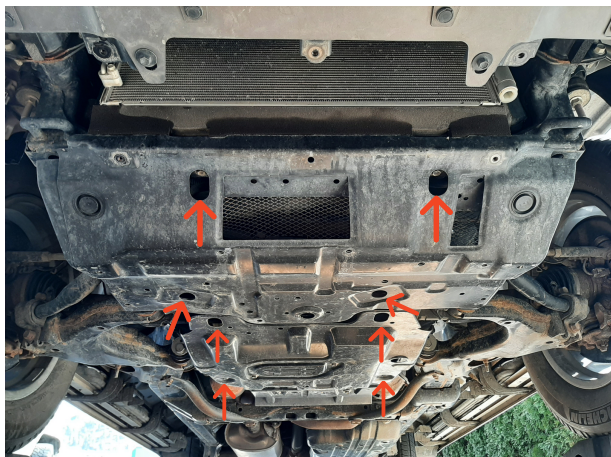

Remove factory 2pc Skid Plates
(KDSS Model Shown)

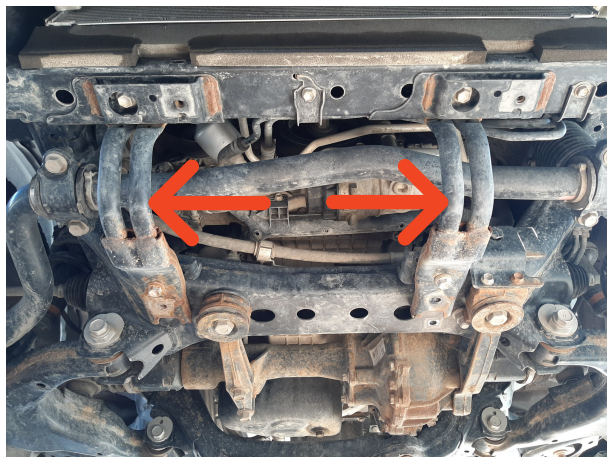

Remove factory Skid Plate Mounting Brackets
(KDSS Model Shown)

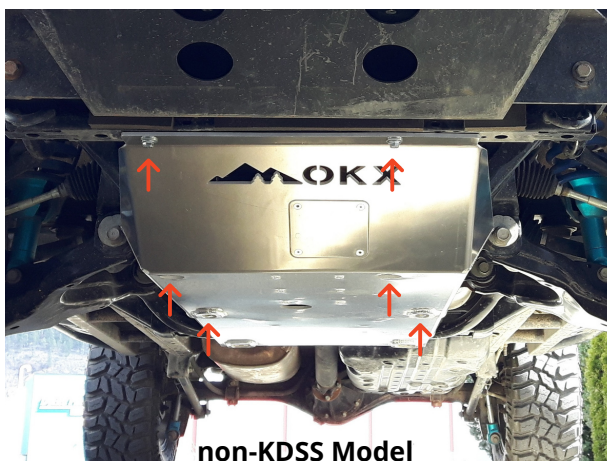

non-KDSS Model

Loosely install OKX Engine Skid Plate with supplied hardware
-M10x30mm- front, M10x35mm- middle
-M8x40mm bolts and washers at the rear 2 locations
Install round (3/8" thick) spacers with the M8x40mm bolts,
between Skid Plate and Frame



KDSS Model

Loosely install OKX Engine Skid Plate with supplied hardware
-M10x30mm bolts-front, M10x35mm-middle
-M8x40mm bolts and washers at the rear 2 locations
Install round (3/8" thick) spacers with the M8x40mm bolts,
between Skid Plate and Frame



If installing the OKX Transmission Plate,
remove factory support bar rear bolts (4 total)
Slide Transmission Plate between Engine Plate and Frame,
being sure to lift round spacers up to the top position
as shown in the next photo.
Install supplied M8x40mm bolts into the rear X-member,
placing the rectangular slotted spacers between the plate
and factory support bar tabs



Proper position of Engine Plate and Transmission Plate,
with round spacer in the top position against the frame