


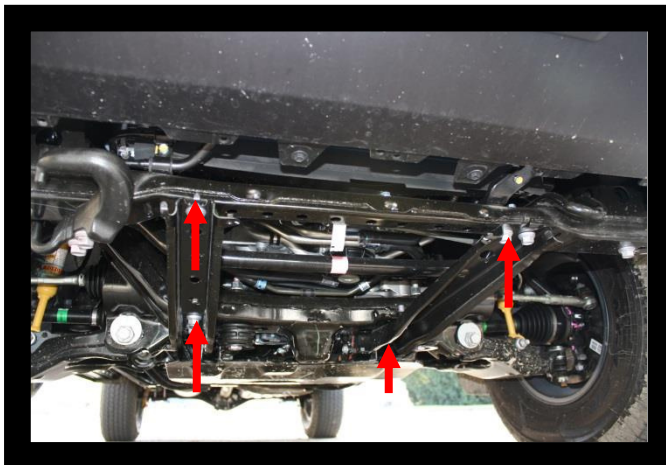

Remove 4 bolts and factory front Skidplate.




2. Remove 4 bolts and rear Engine Skid (if equipped).




3. Remove Skid support brackets, save 4 M12 factory bolts for installation of OKX Engine Skid.



4. Install Engine Skid using 4 M12 factory bolts, and supplied M8x35mm bolts, washers & 3/8" spacers.

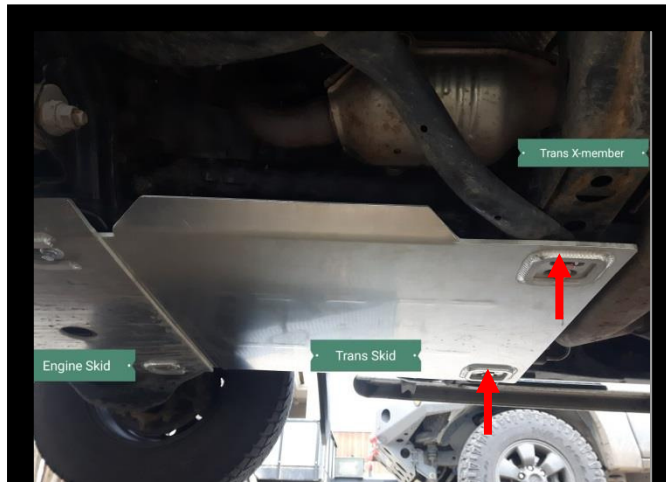

Remove 2 rear bolts from each support bar. Install Transmission Skid as shown, placing slotted spacers between Skid and support bar tabs.

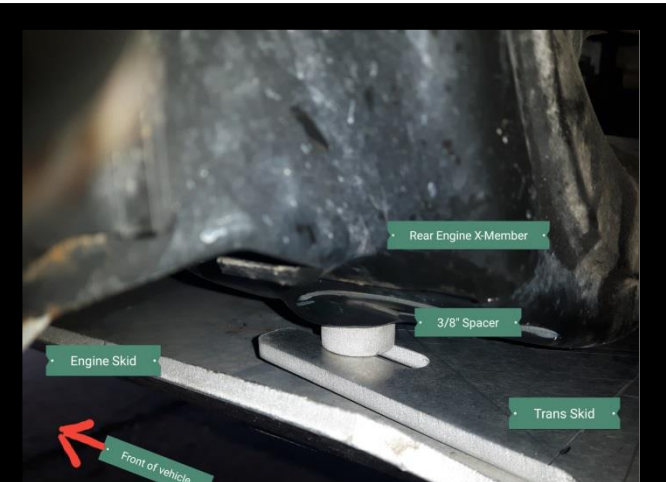

When installing OKX Transmission Skid, loosen rear Engine Skid bolts and slide Trans Skid between x-member and Engine Skid. Lift 3/8" spacer up to x-member.