


2016-Current Tacoma 4wd LCA Skids

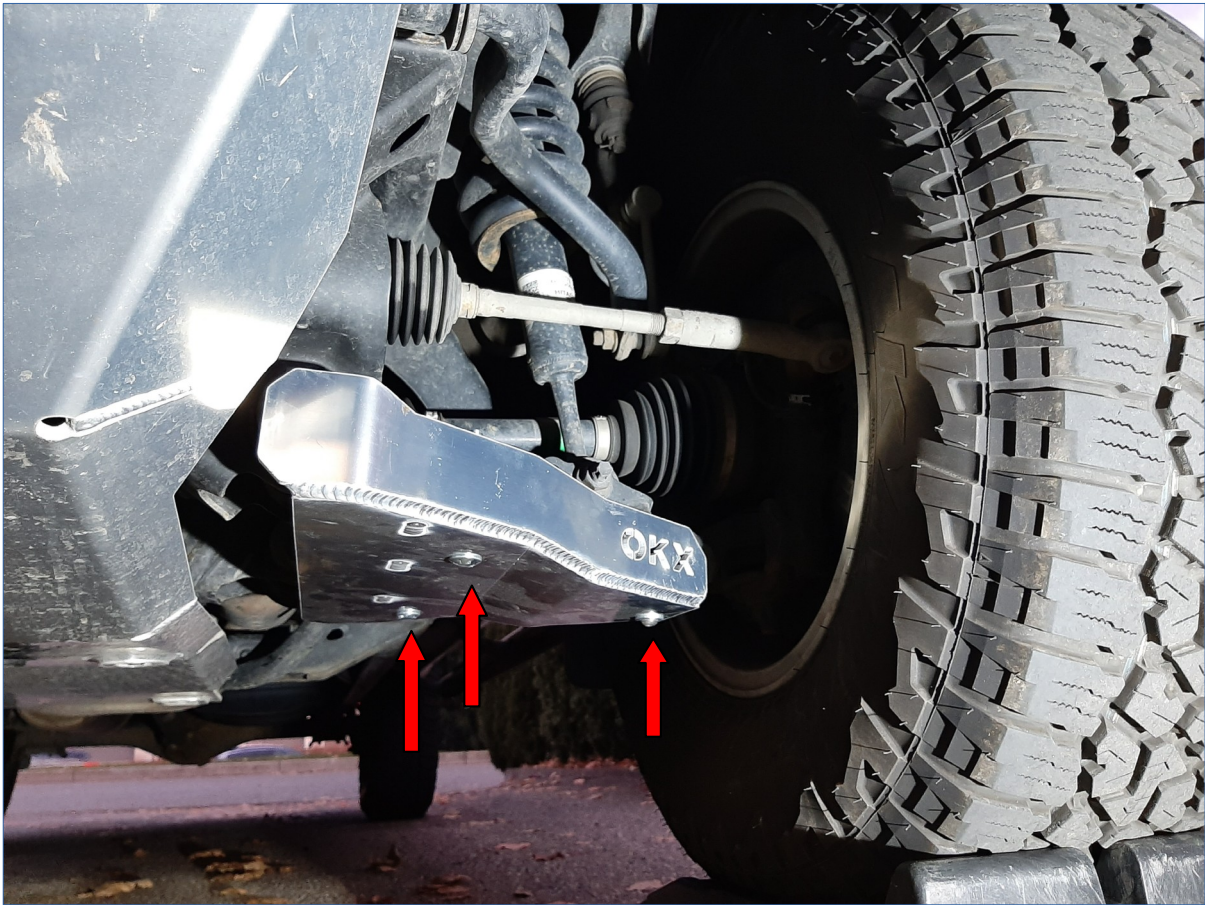

Install Lower Control Arm Skids using supplied hardware.

There may be plastic plugs in some of the factory holes used for installation. Remove these plugs before proceeding.

3/8" x 4" Carriage Bolt at the rear. Place Round Spacer between Skid & Control Arm.

3/8" x 3.5" Carriage Bolt at the front.

5/16" x 3" Button Head bolt w/washer at the outer hole.

Place Slotted Spacer between Skid Plate and Control Arm.

Lightly snug 2 Carriage Bolts first, making sure the Button Head bolt is aligned. Tighten Button Head Bolt, followed by the 2 Carriage Bolts.

Cycle steering and check for clearances around the Wheel and CV Boots.

Note: some aftermarket (stock) replacement arms may require drilling one or more holes.