

Tacoma Gas Tank Shield

2005-Current Tacoma 4wd


Access Cab & Double Cab Only




Tank Strap Replacement **(Non OFF-ROAD models only)**

Install easiest with 1/4 tank or less.

Support tank near front strap with a floor jack. Only remove and replace 1 strap at a time.

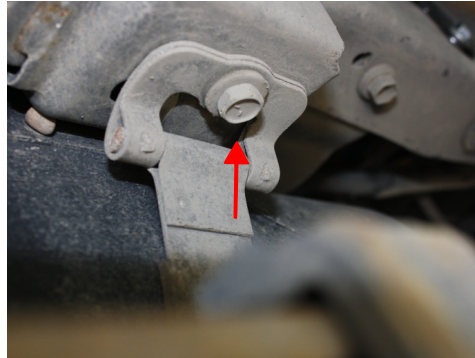


Remove tank strap bolt located on driver side frame rail.
Save hardware.

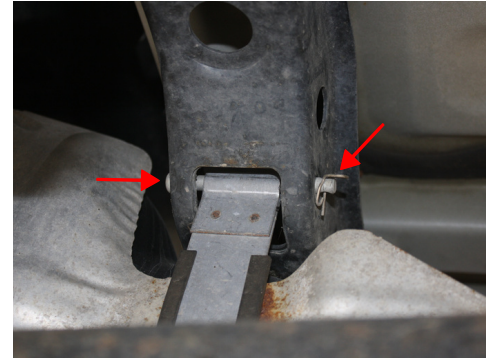

Remove clip and mounting pin from tank strap - located above driveshaft. Save hardware. Transfer rubber tank isolator to new strap. Reinstall new strap using original hardware. Repeat steps for rear tank strap.


Torque Strap Bolts to 46ft-lbs

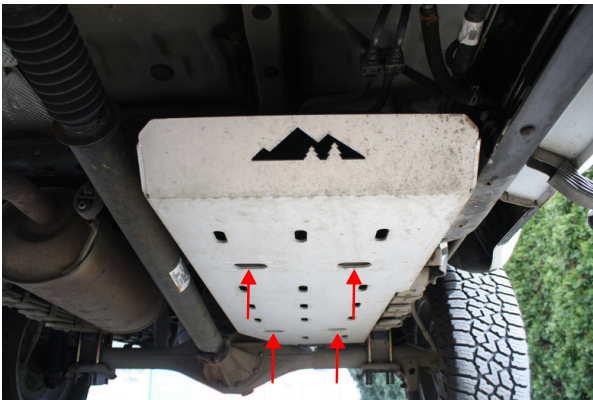

Tank Shield Installation

OFF-ROAD models- Support factory tank shield and remove 4 bolts holding shield in place. Remove factory tank shield.

Lift OKX Gas Tank Shield into position, locating 4 tank strap studs into slotted mounting points.

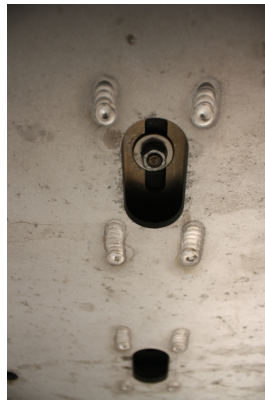

With Tank Shield supported, install supplied washers and lock nuts. Do not tighten yet.



Adjust Gas Tank Shield so there is even clearance between the tank and Shield on both sides. Ensure clearance along frame.

Tighten hardware to 18ft-lbs.

Inspect and re-torque hardware periodically.